

**zzHof – PROJECTS**  
**Illustrations**

---

**zzHofprojects.com**

**Copyright © 2012 by Z. Hof**

---



**Created in the United States by:**  
**Z. Hof**



---


**Illustrations**

---


**Note:** These illustrations are to illustrate construction methods and terms; however, Local naming conventions may vary depending on where the construction work is being done. But, many of the terms are recognized by construction workers throughout the United States and the World.

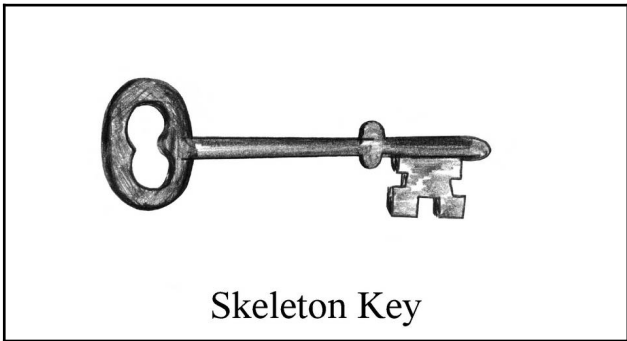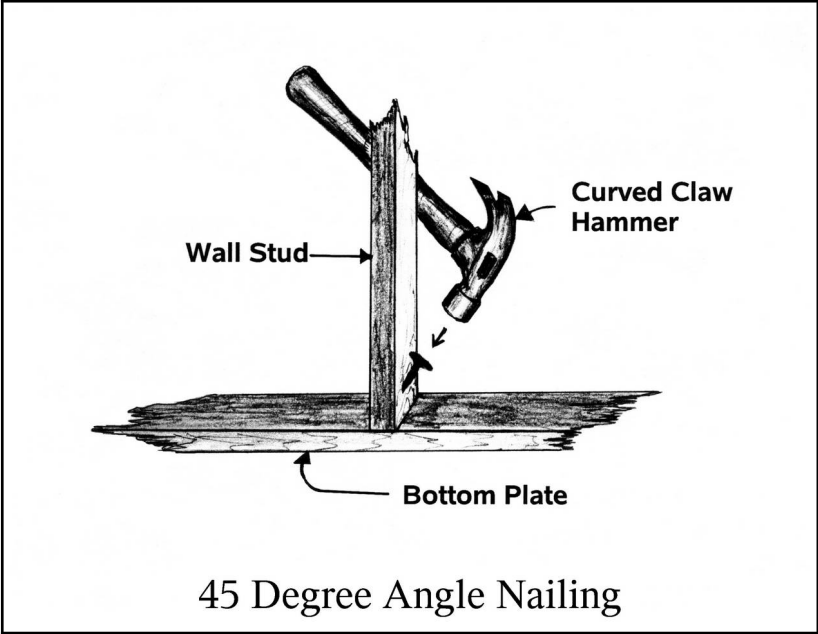

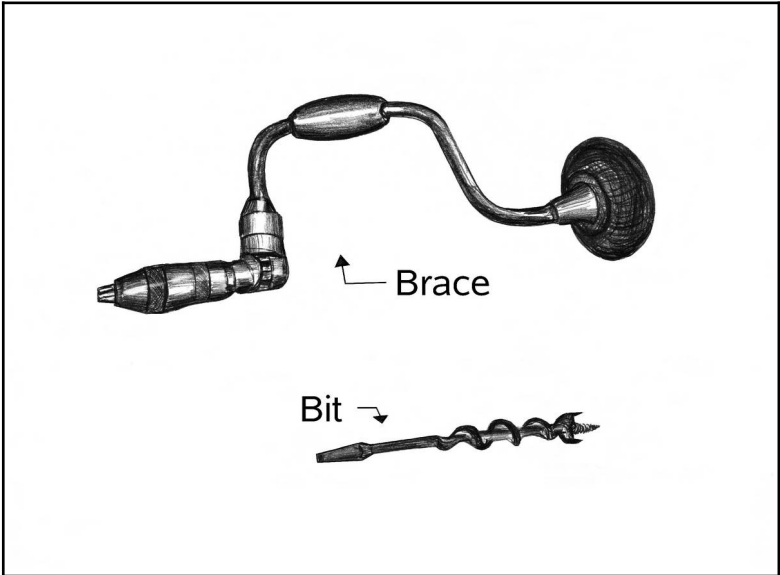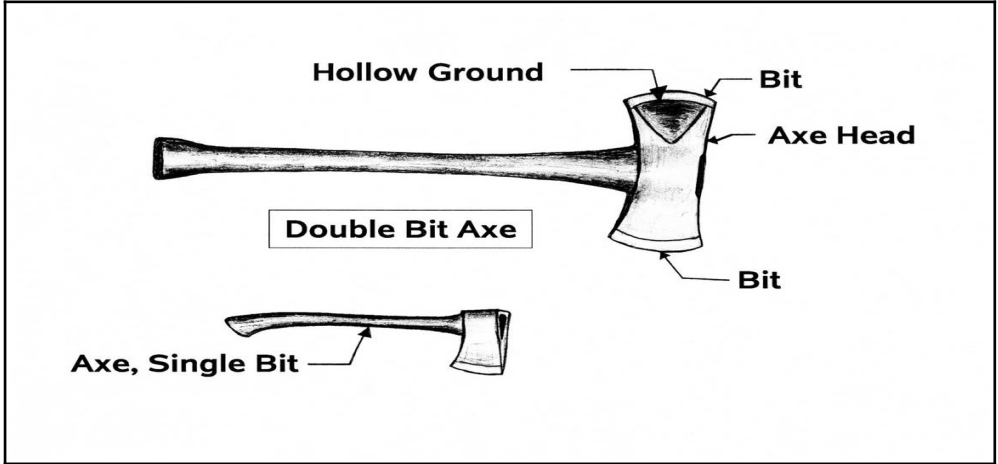


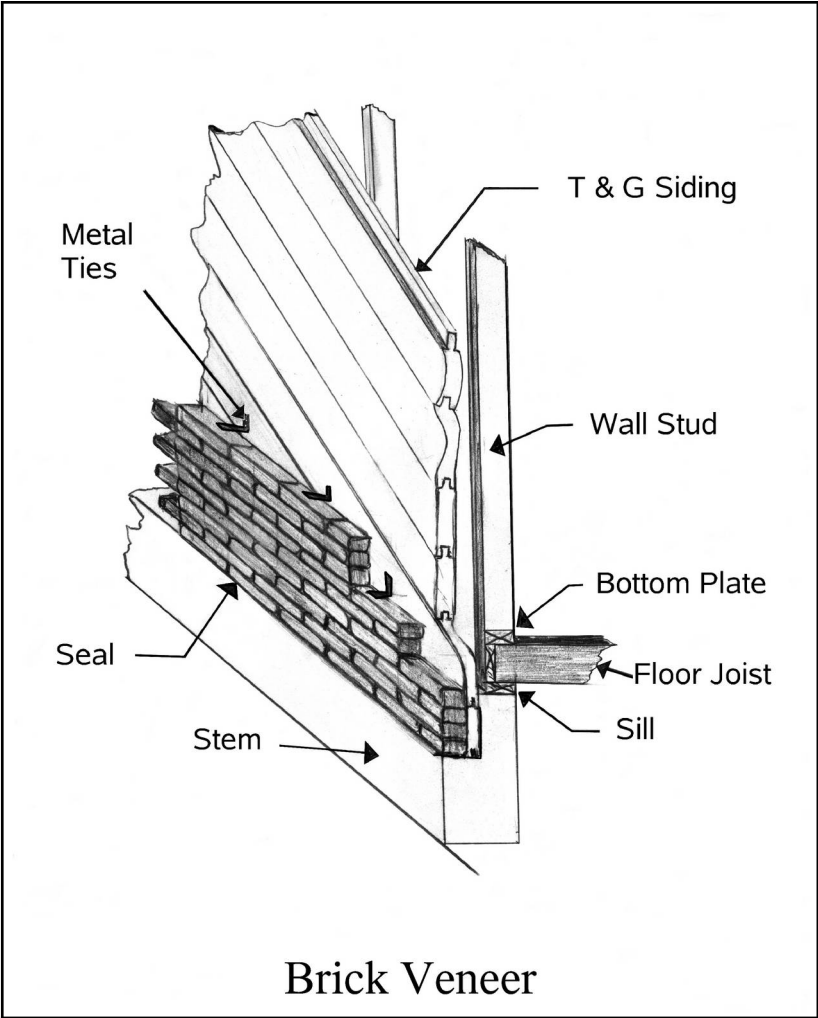

Notch  
For a  
Hand  
Saw

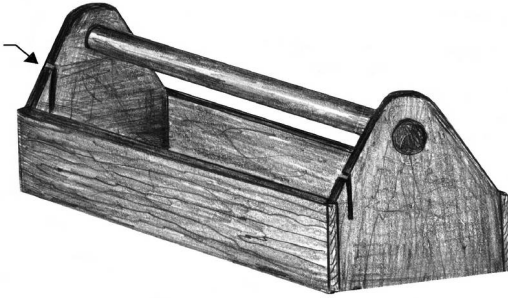

Pole Handle Tool Box

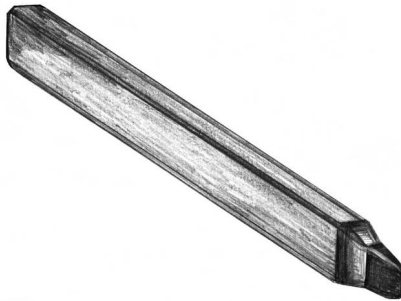

Carpenter Pencil

Feather  
Edged  
Casing




Beaded  
Casing




Colonial Casing


Door Casings

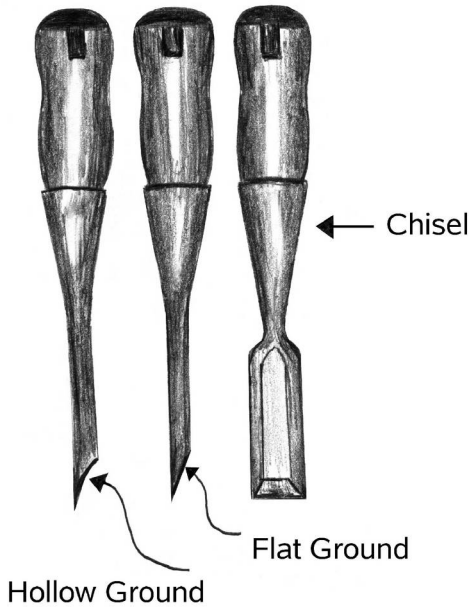


Chisels

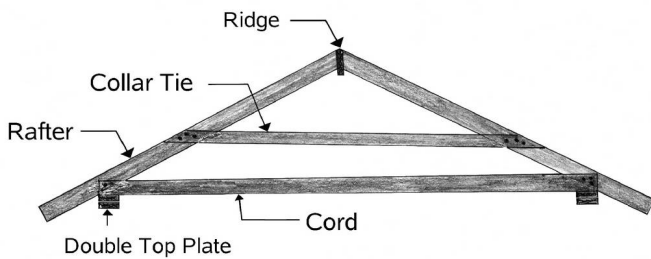



One Kind Of Conventional Framing

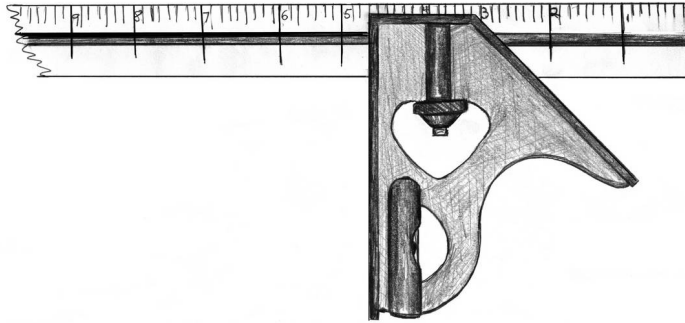


Combination Square

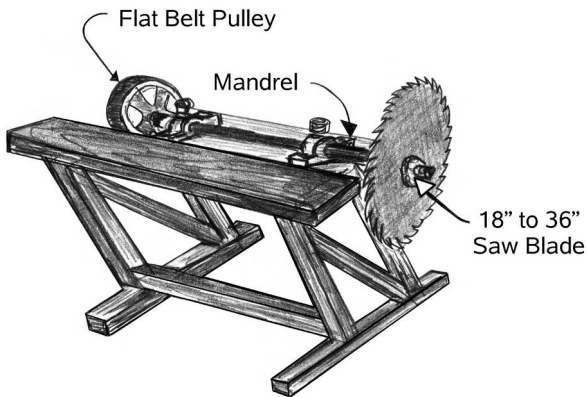


Cordwood Saw or Buzz Saw

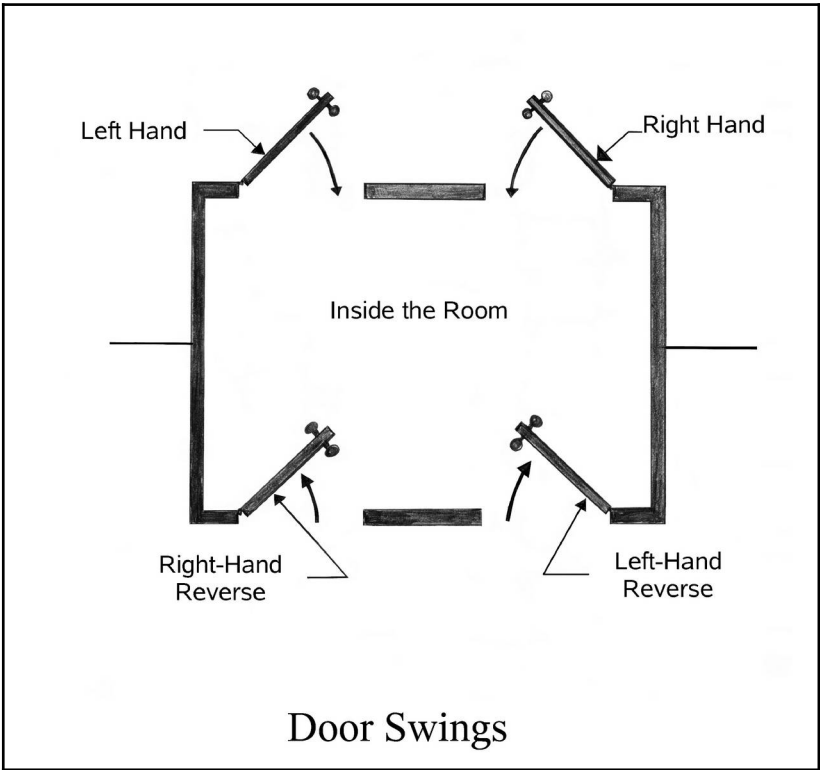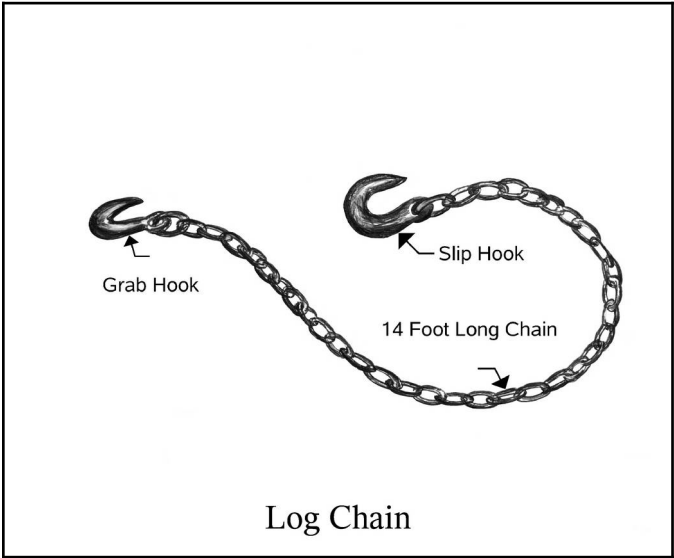


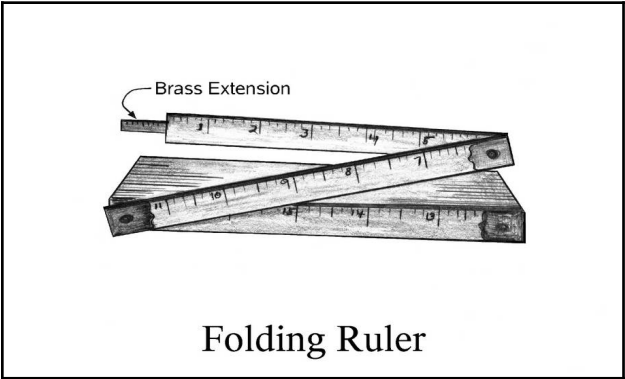


Folding Ruler

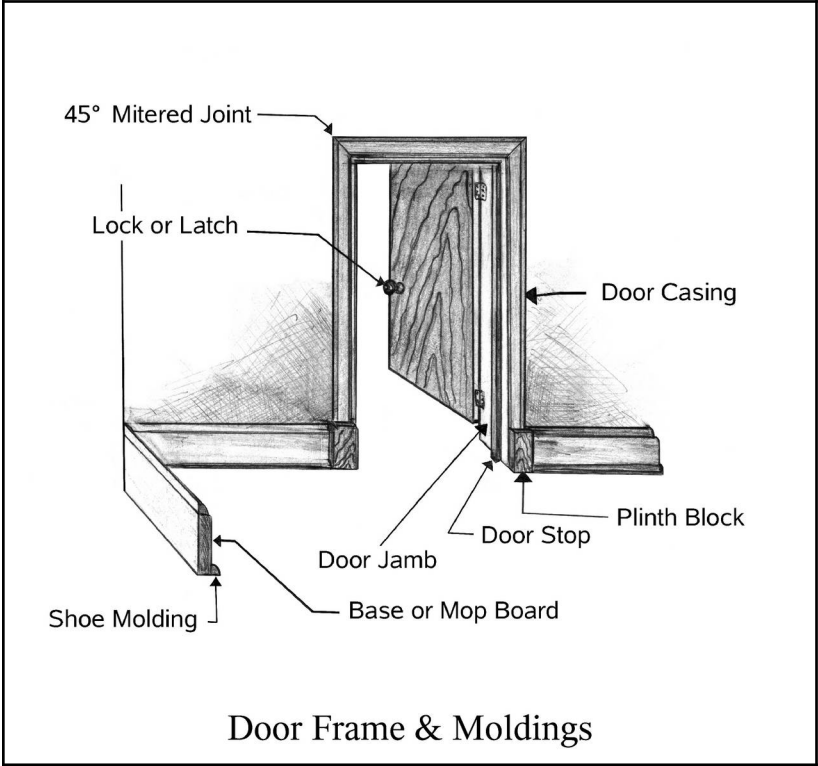


Door Frame & Moldings

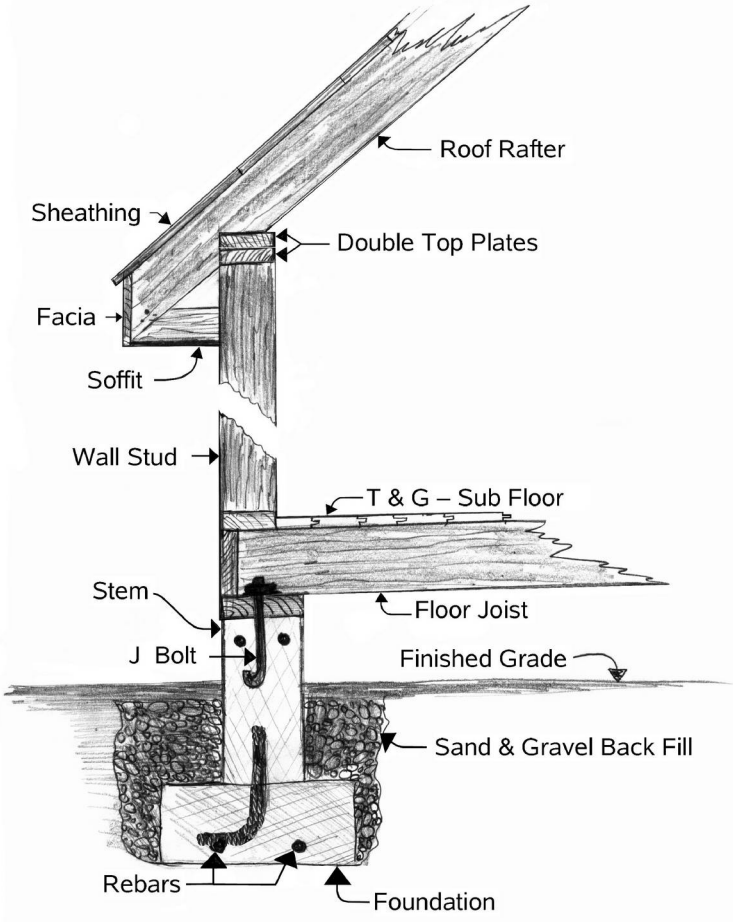


Foundation & Up

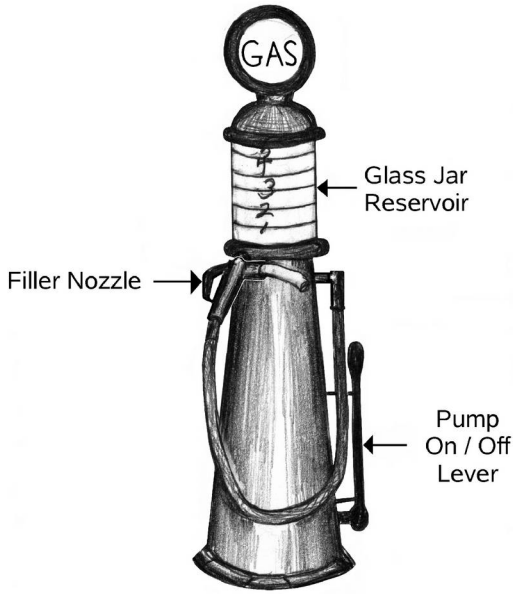


Glass Jar Gravity – Gas Pump

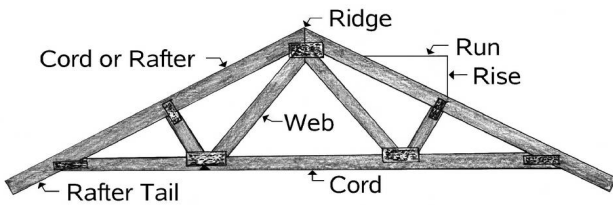



Roof Truss

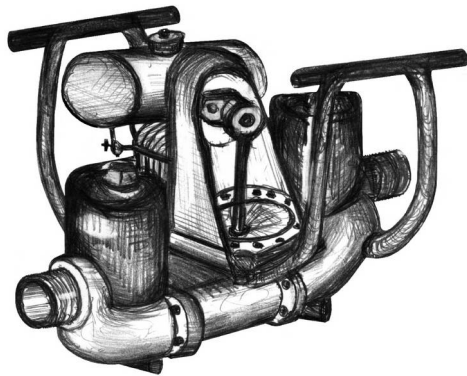


Diaphragm Pump

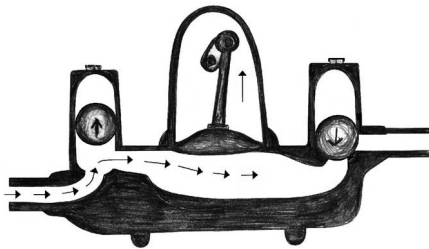

Diaphragm Pump - Intake Stroke

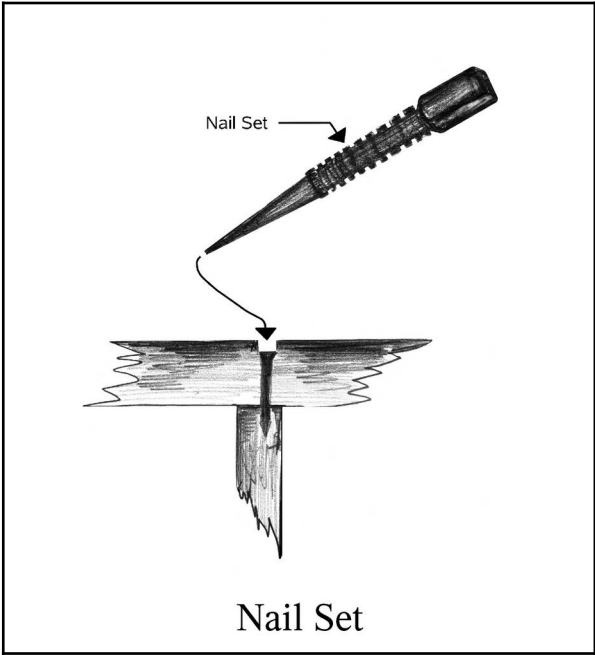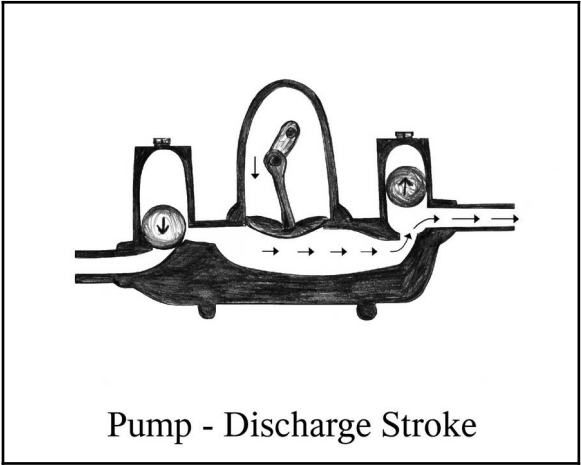


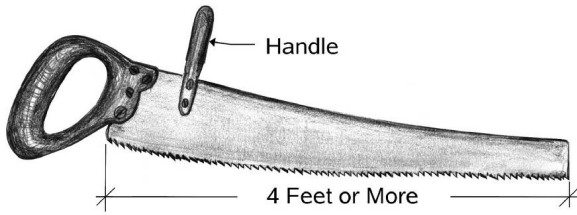


One Man Saw





Sledgehammer

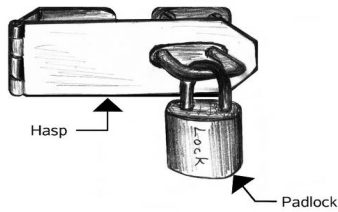


Hasp

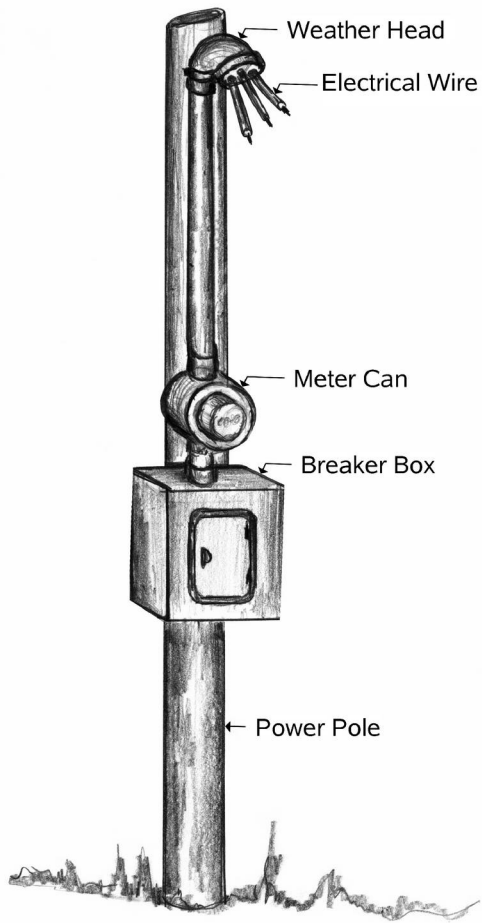


Temporary Power Pole

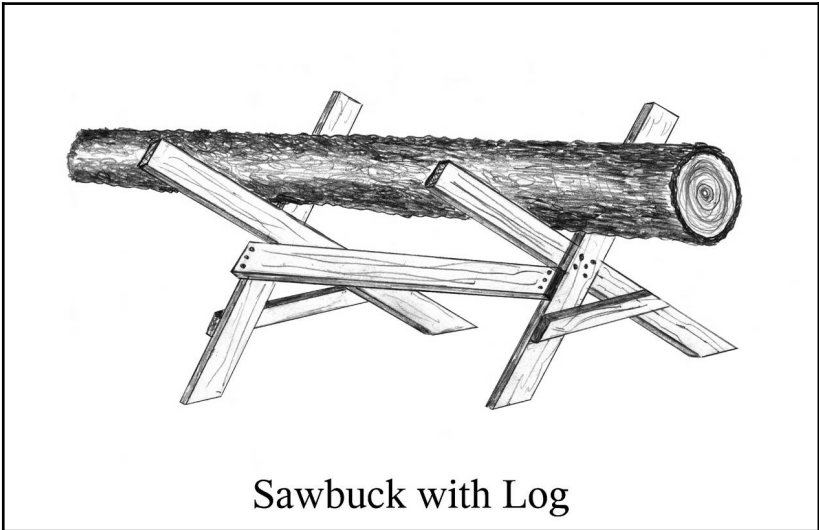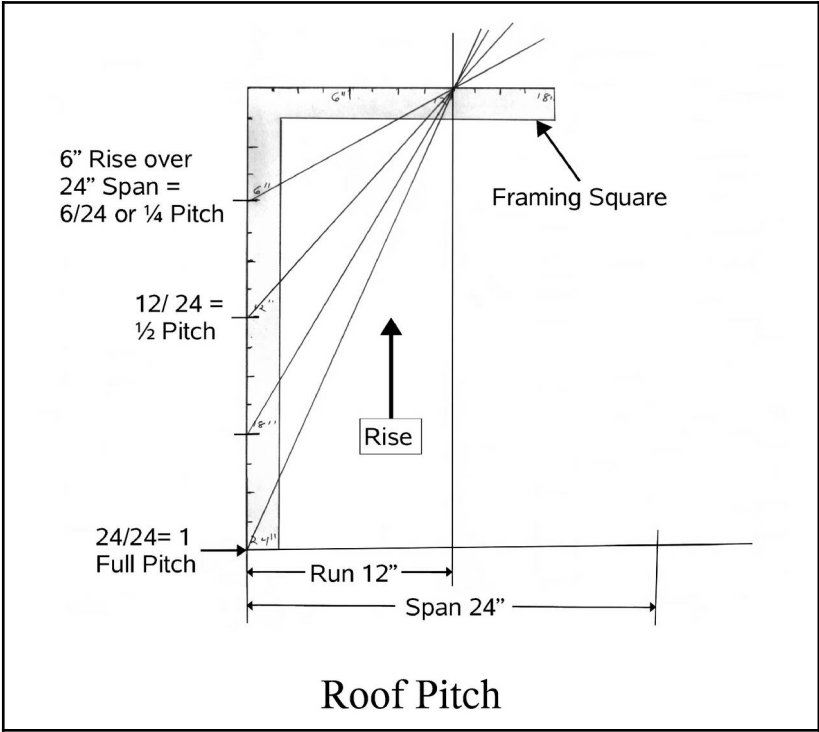


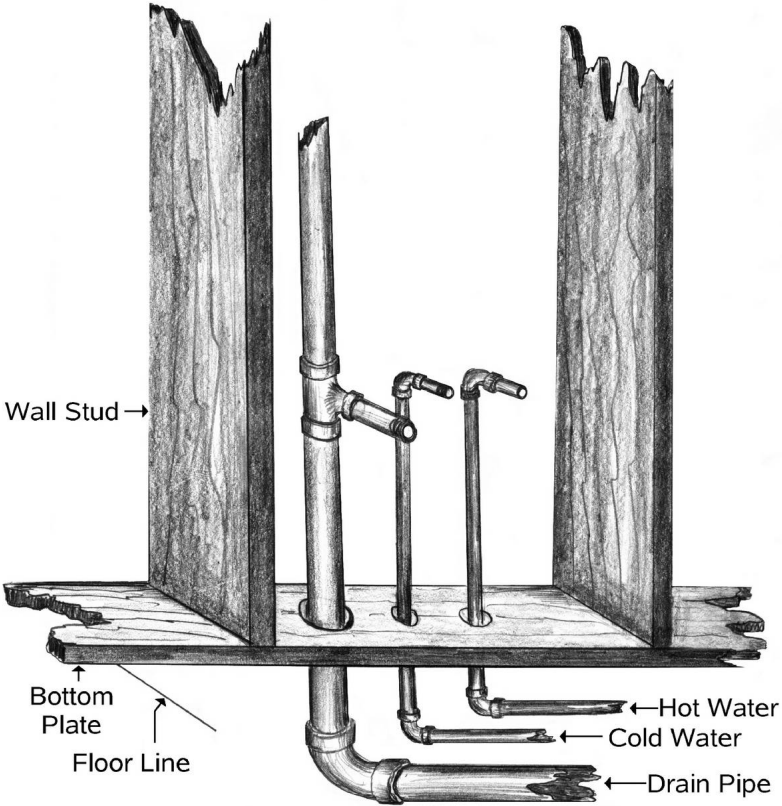

Rough-in Plumbing

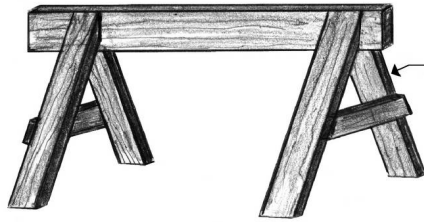


Strong Good  
for Framing

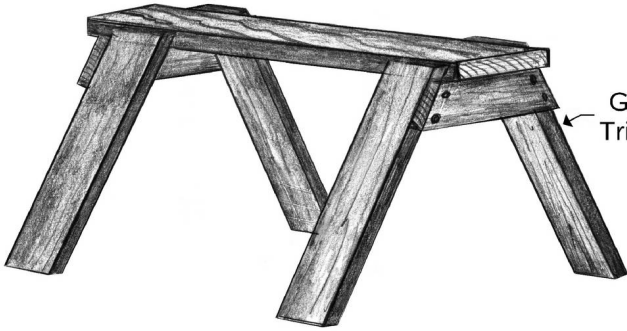


Good for  
Trim Work


## Sawhorses

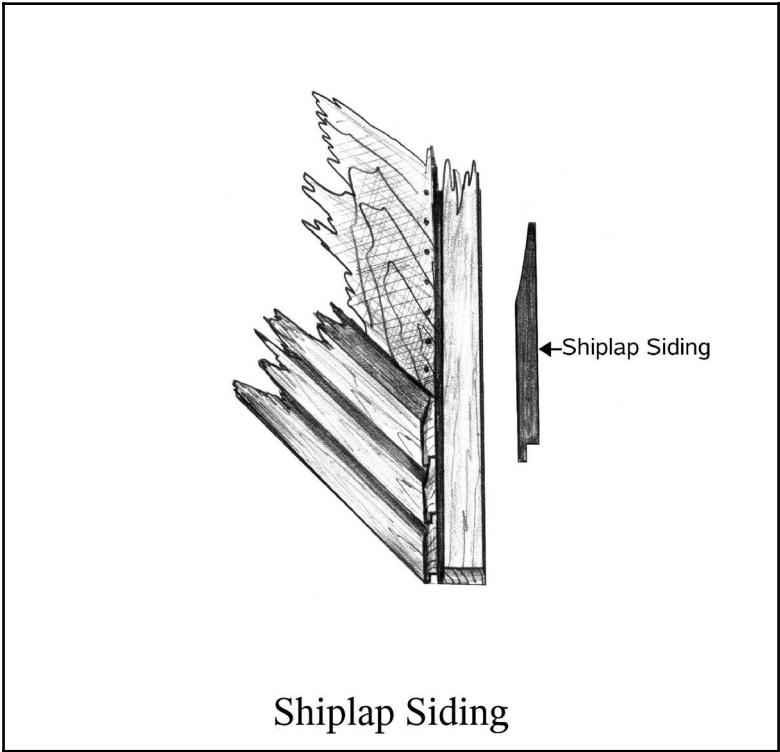



Shiplap Siding

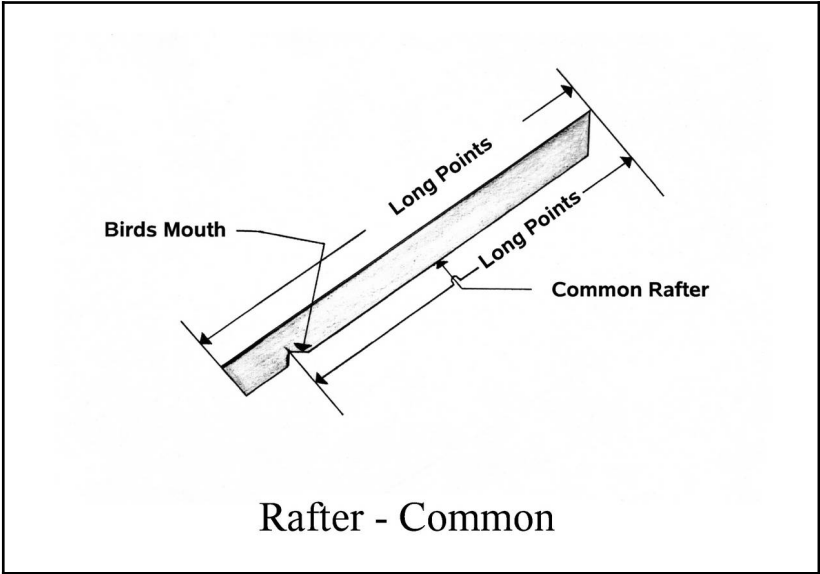

Rafter - Common

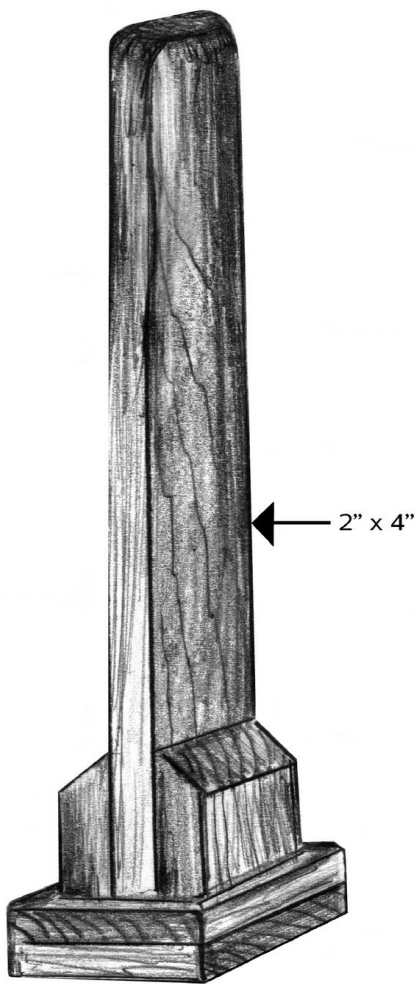


Homemade Tamp

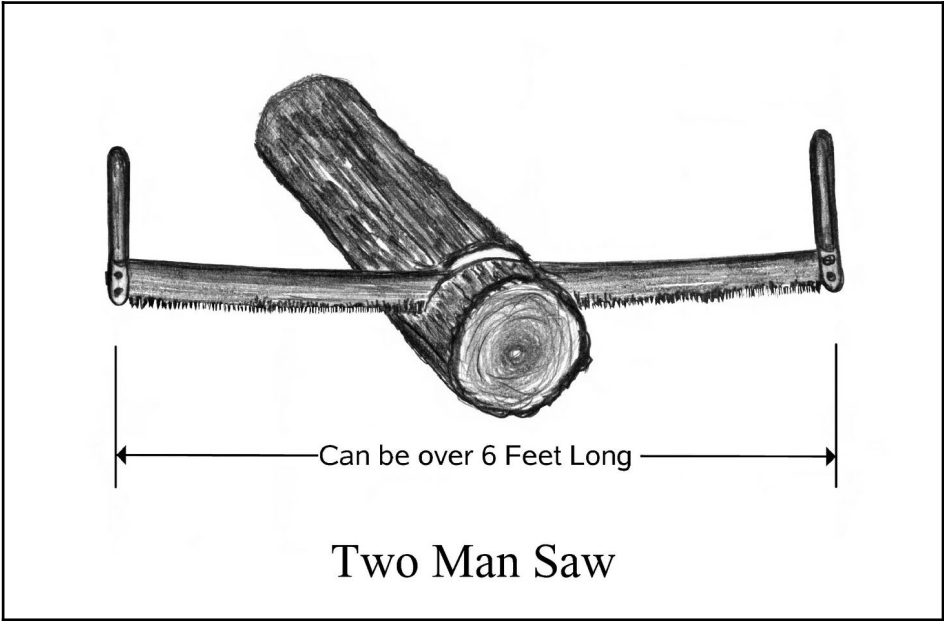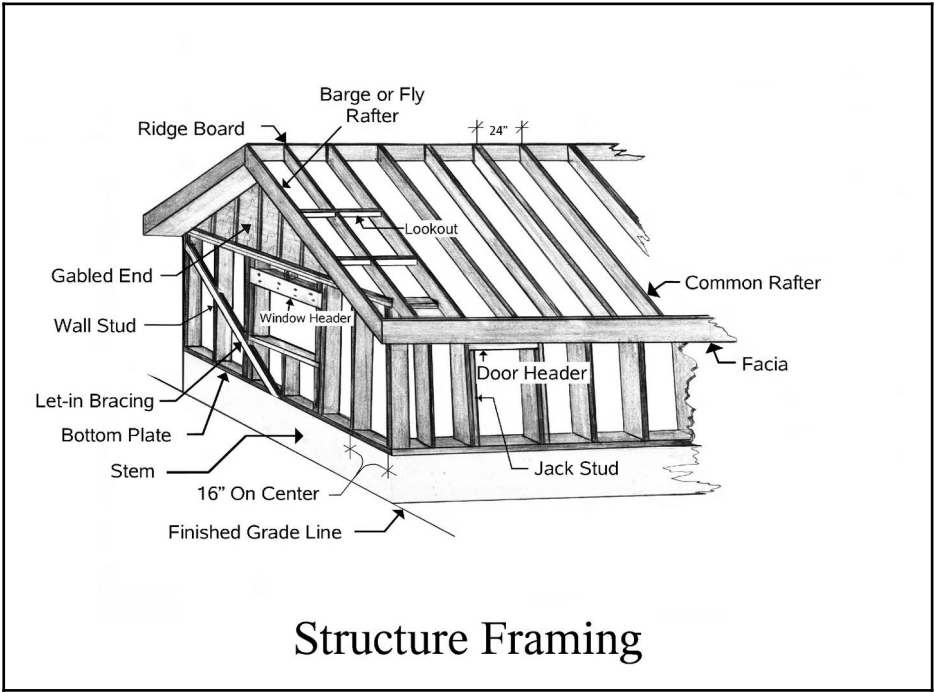

Wedge Driven is in with  
a Sledgehammer



Steel Wedge

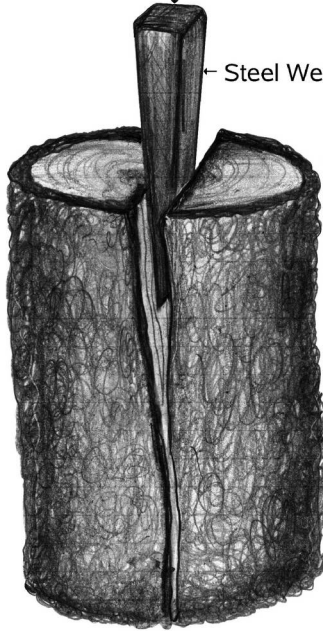

Steel Wedge